
Installation

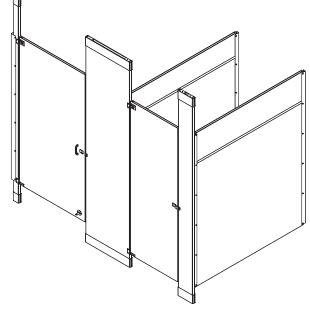

For 69" and 72" Tall Doors and Panels Only Powder Coated & Stainless Steel Restroom Partitions Floor-to-Ceiling – Series 700

Table of Contents

Pre-Installation Information 2-3
Layout Dimensions - Continuous Brackets
Mounting Brackets to Wall 4
Leveling Bolts to Pilaster
Mounting Brackets to Pilaster 5-6
Pilaster Mounting Hardware 6-7
Pilasters and Panels 8-9
Pilaster Shoes
Hinges 11-15
Door Hardware 16-19
Urinal Screens



Read the instructions in this manual before beginning installation. Save these instructions and refer to them for inspection, maintenance and troubleshooting information.

For questions regarding the operation, installation or maintenance of this product, visit bradleycorp.com or call 800.BRADLEY (800.272.3539).

Product warranties and parts information may also be found on our website at bradleycorp.com.



HDWT-INSTR-039 Rev A; ECN 17-14-005R © 2018 Bradley Page 1 of 20 12/3/2018 P.O. Box 309 Menomonee Falls, WI 53052 USA 800 BRADLEY (800 272 3539) +1 262 251 6000 bradleycorp.com



Safety Information

To ensure proper operation:

Installation

Failure to comply with these instructions may result in personal injury and/or property damage and will void the partition warranty.

Personal protective equipment (PPE) is required during the installation and maintenance of this product.

Compliance and conformity to local codes and ordinances is the responsibility of the installer.

Before beginning installation, make sure that the wall and floor backing are adequate to support the secure mounting of the toilet compartment units.

Make sure all floors and walls are clean and smooth. Remove loose impediments, such as protruding nails and other debris which could affect installation.

Review your partition layout drawings and verify the number of stalls and components before beginning installation.

This installation manual provides instruction for the assembly of normal partition configurations and standard components. Non-standard configurations or components including but not limited to curved or angled walls, partial walls, oversized panels, or modified hardware are not covered in this manual.

To avoid product or property damage:

Carefully remove components from skid, do not drag.

Leave the protective masking on (stainless steel only) until installation is complete. To prevent warping, always lay the material flat. Do not lean the material against the wall or stack unevenly.


To prevent "dimpling" extra caution should be taken when instructed to drill through one side of face only.


Supplies Required


- Chalk line and pencil
- Tape measure and 4' level
- Jigsaw (or hacksaw) and circular saw
- Two spring clamps
- 1/8", 9/64", 3/16" and 1/4" dill bits


Hardware Provided


- Power drill or screw gun with drill bit extension
- 1/4" and 5/16" ceramic tile and masonry drill bit
- Hammer drill
- Spacers, 6" (152mm) and 9" (229mm) high and strong enough to support the panel

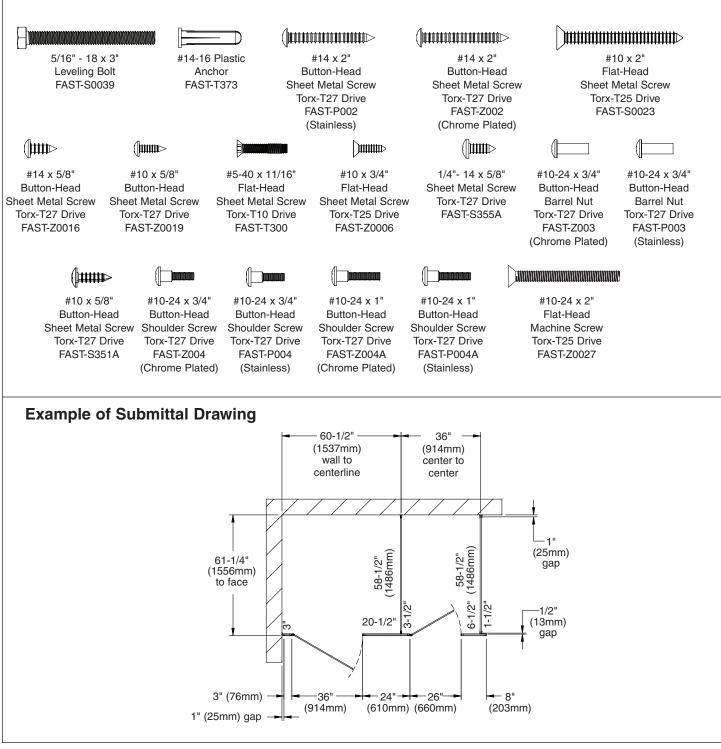


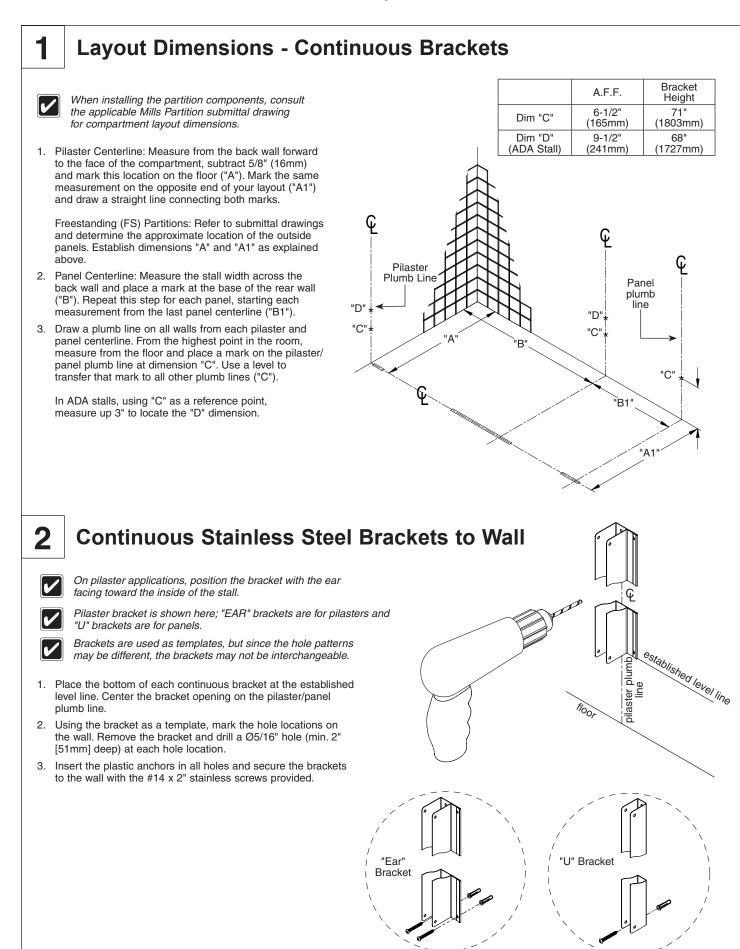


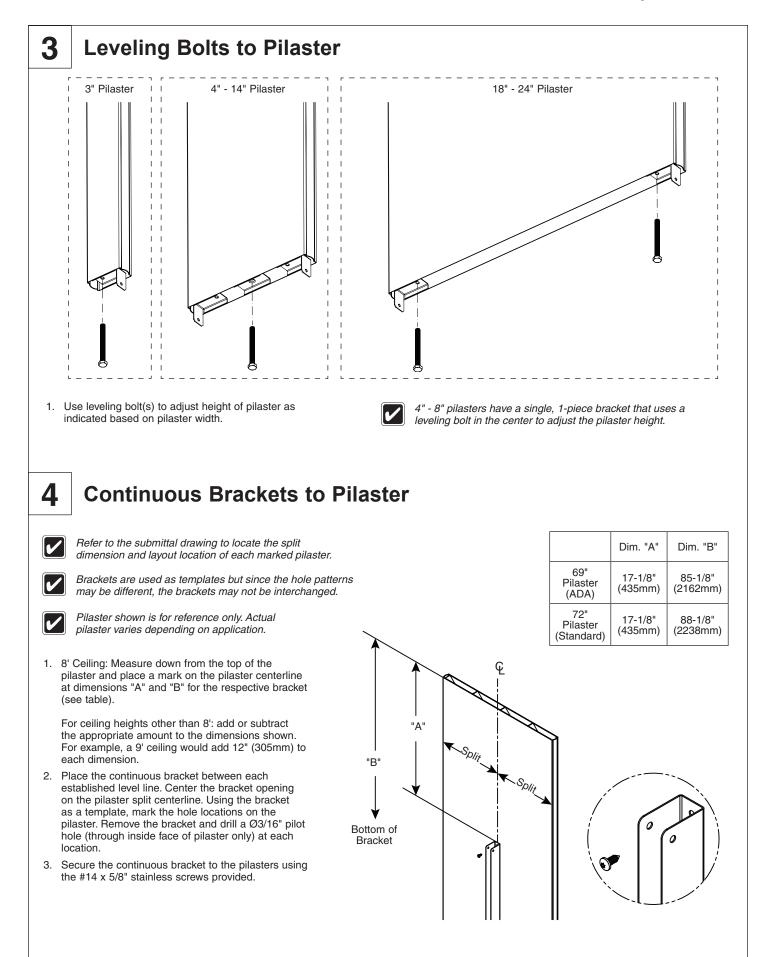


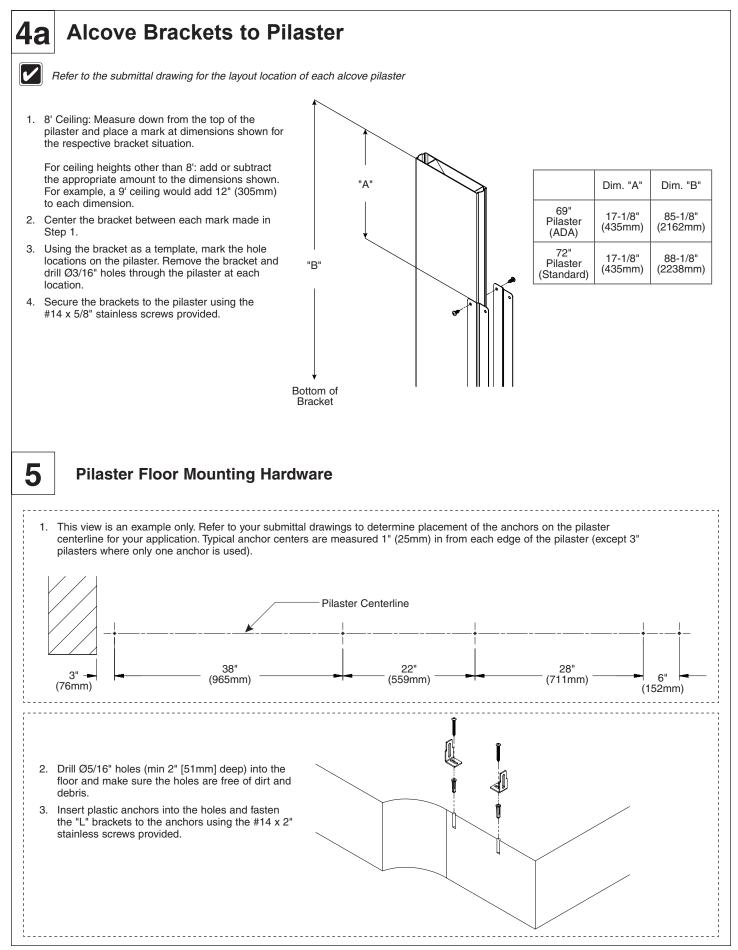


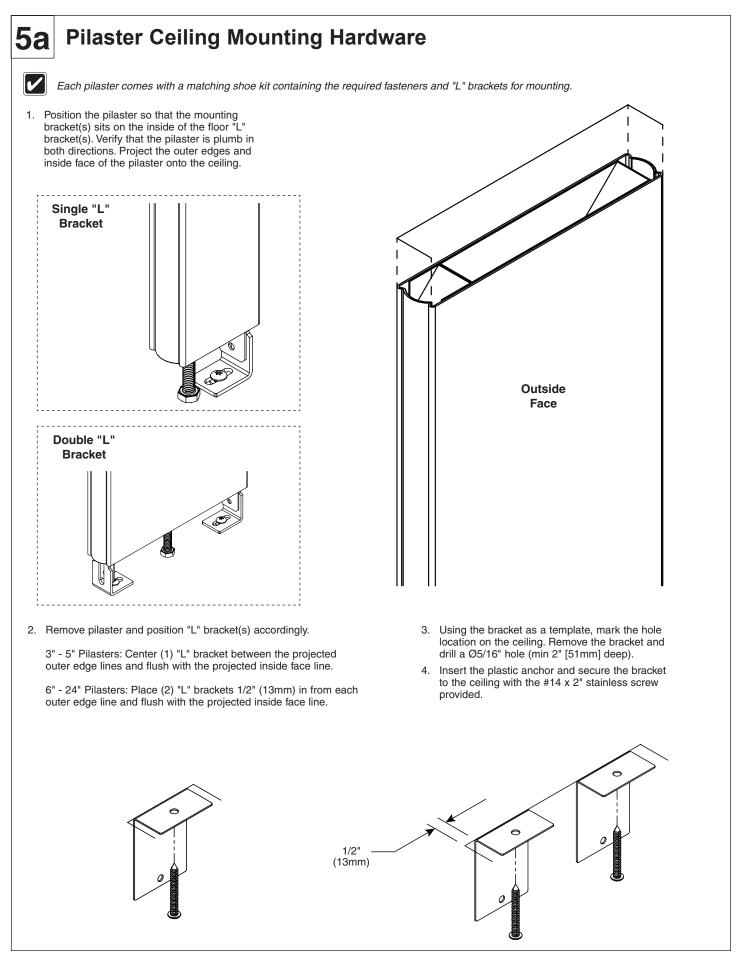


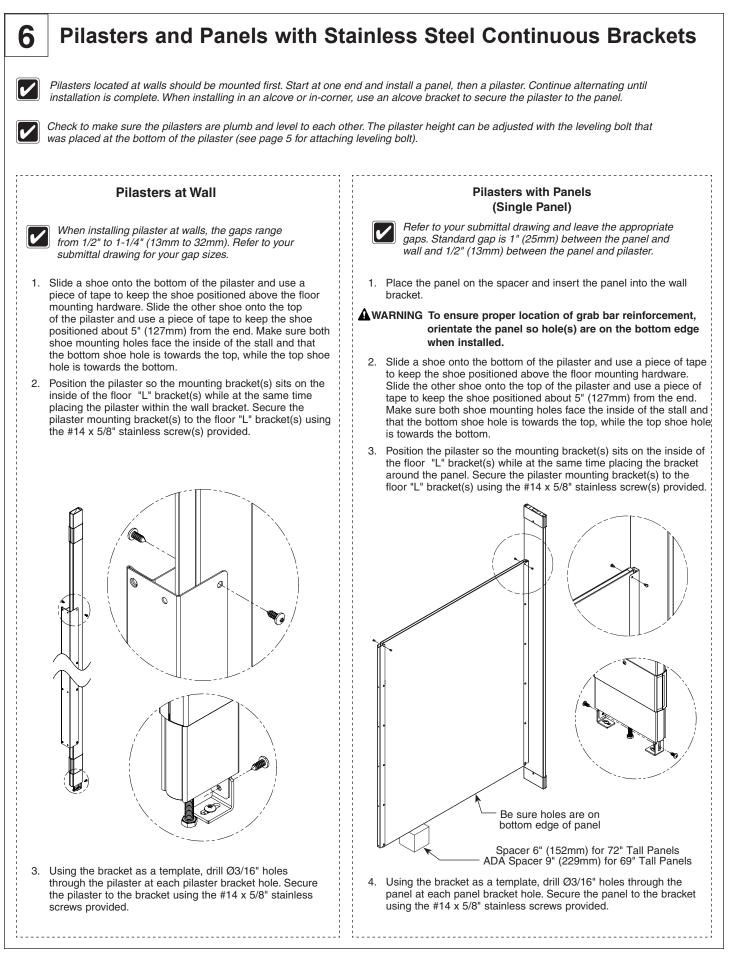


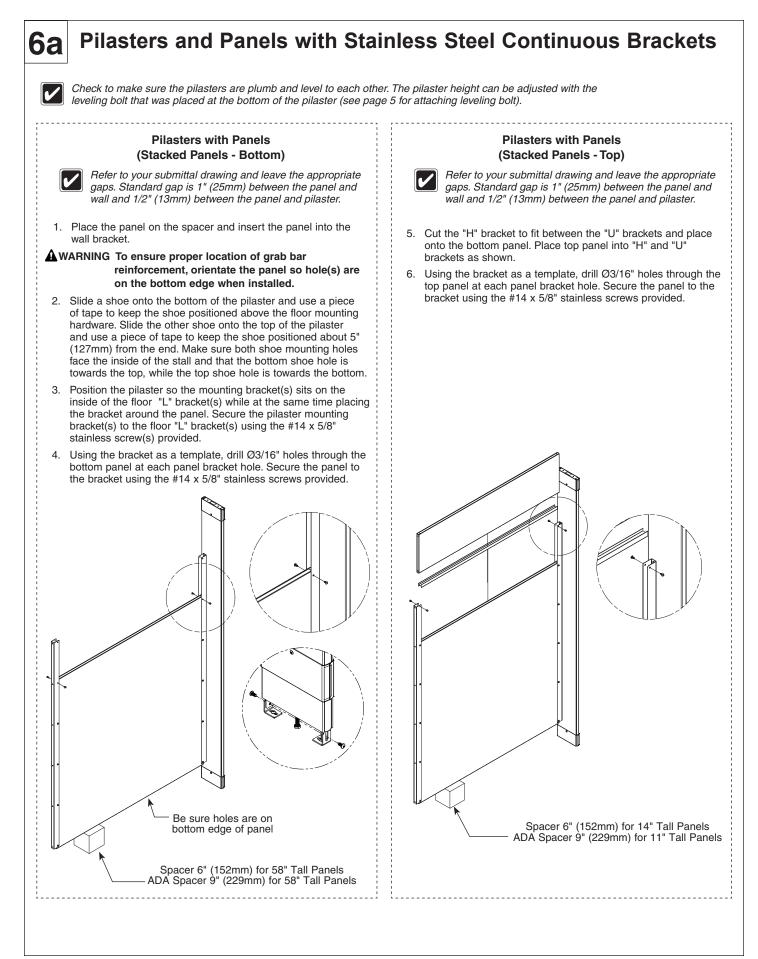

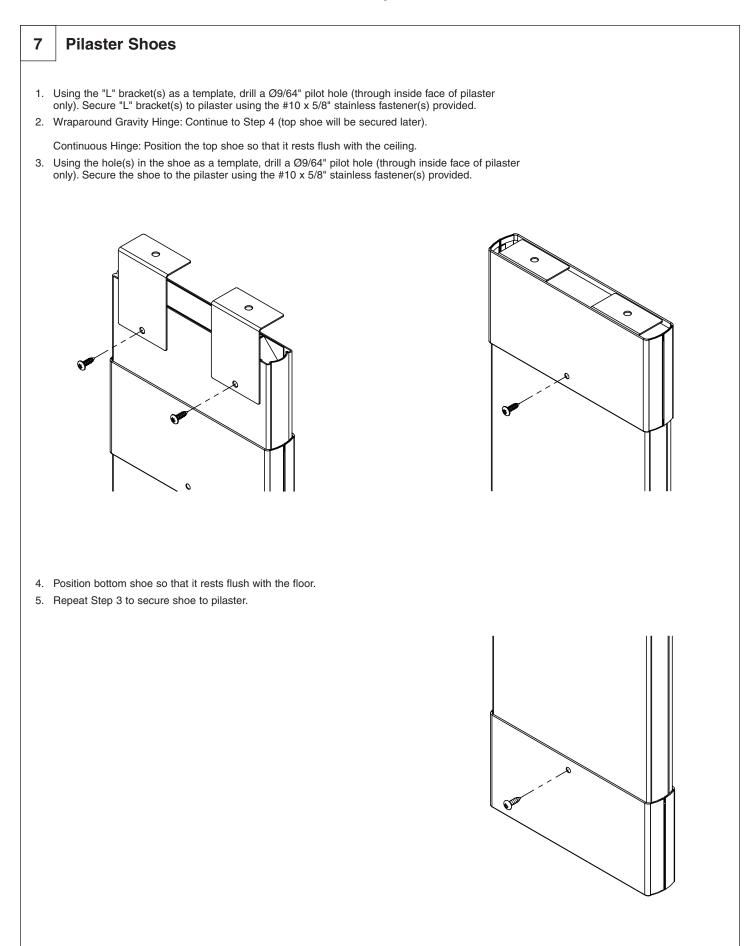


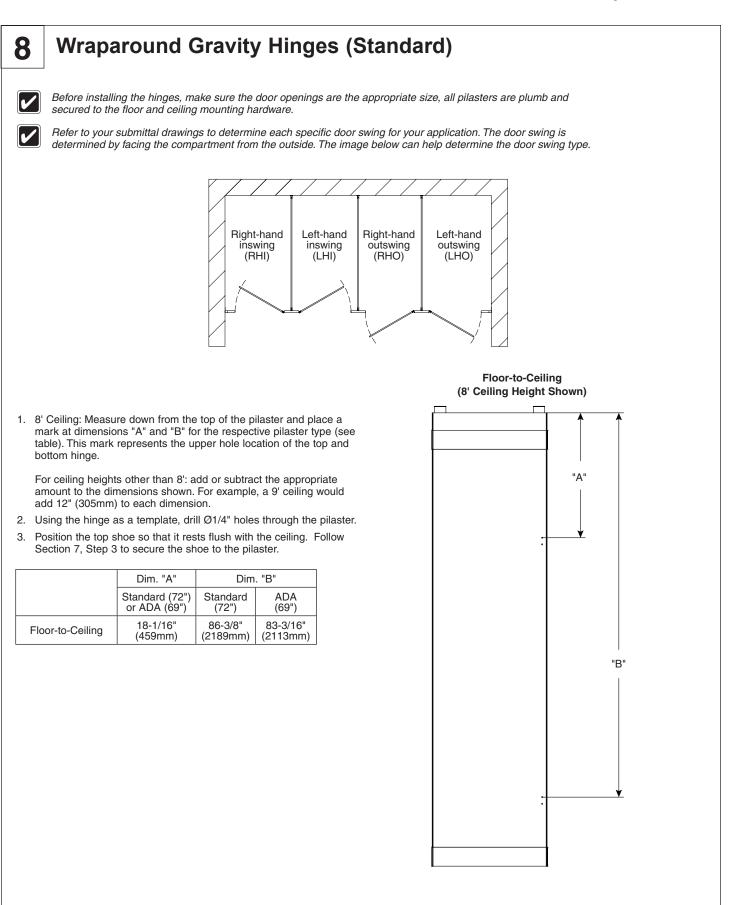


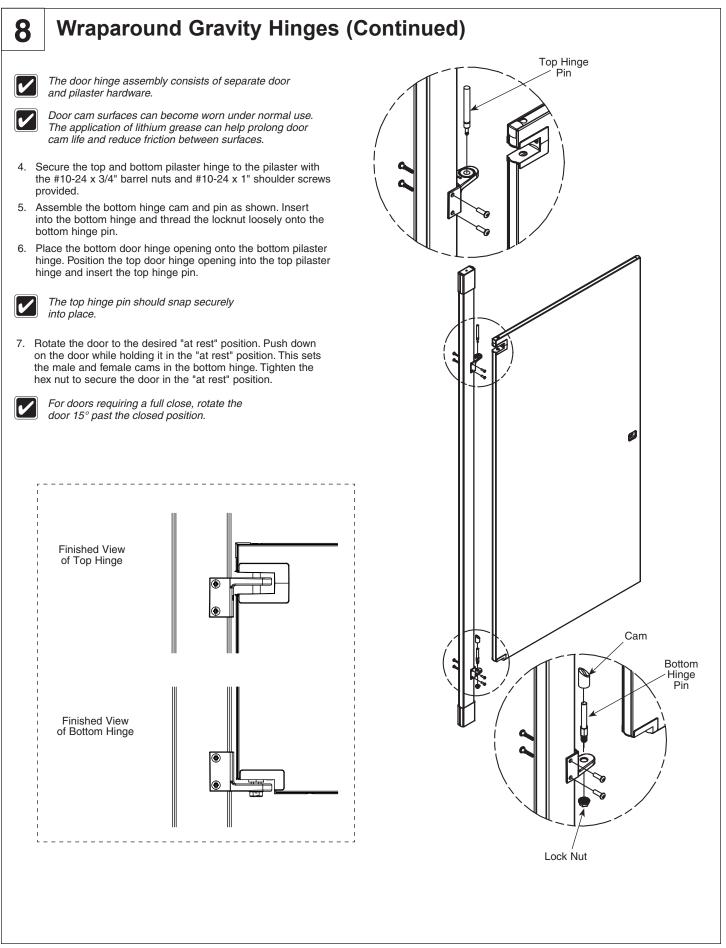


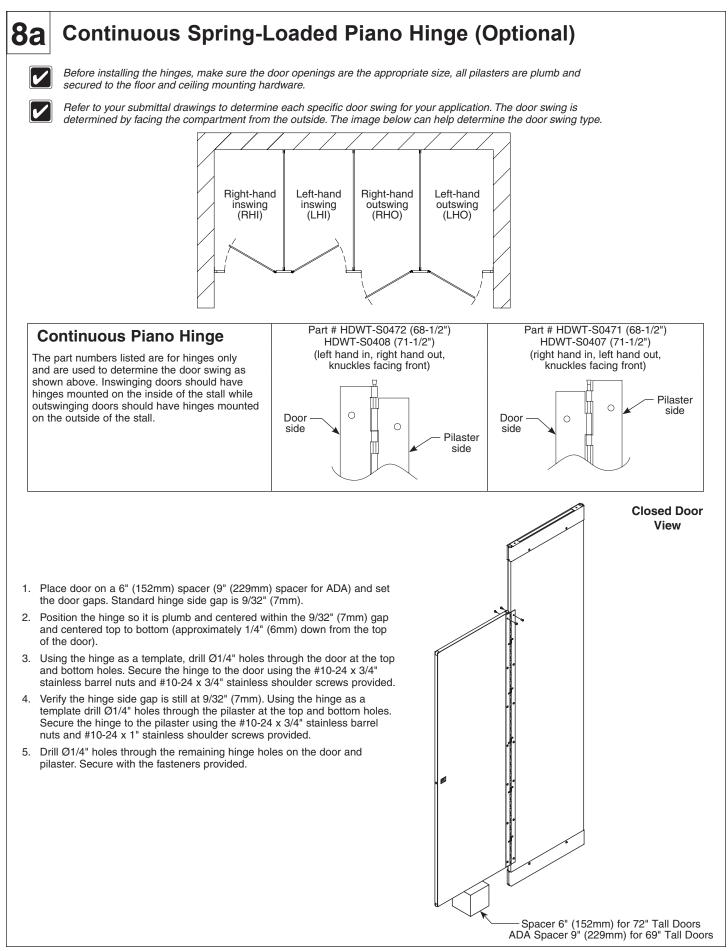


Bradley • HDWT-INSTR-039 Rev A; ECN 17-14-005R

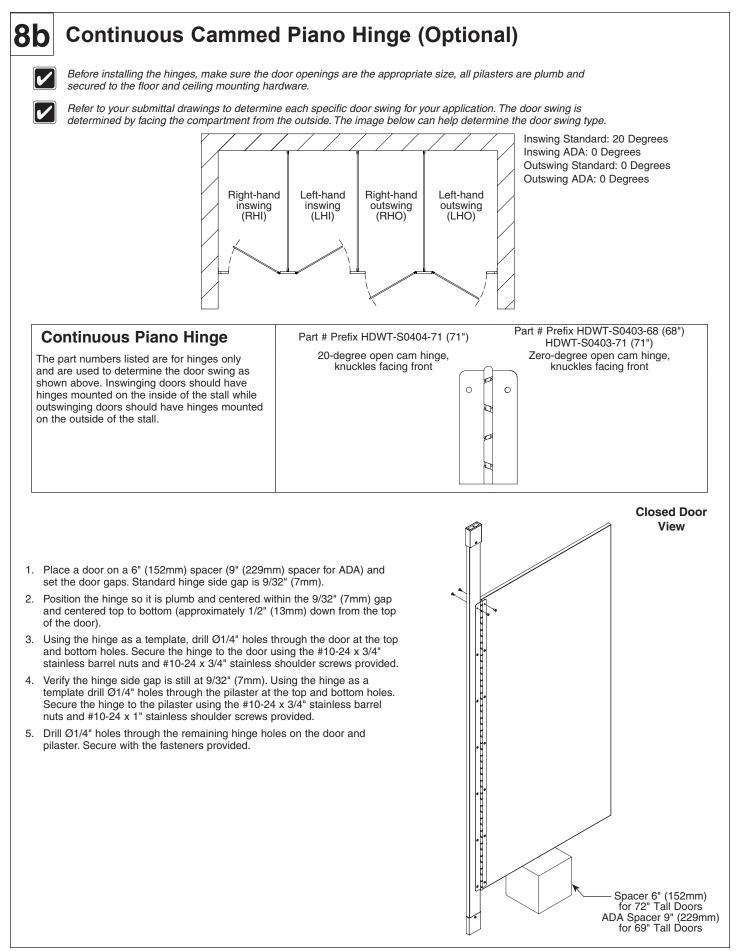

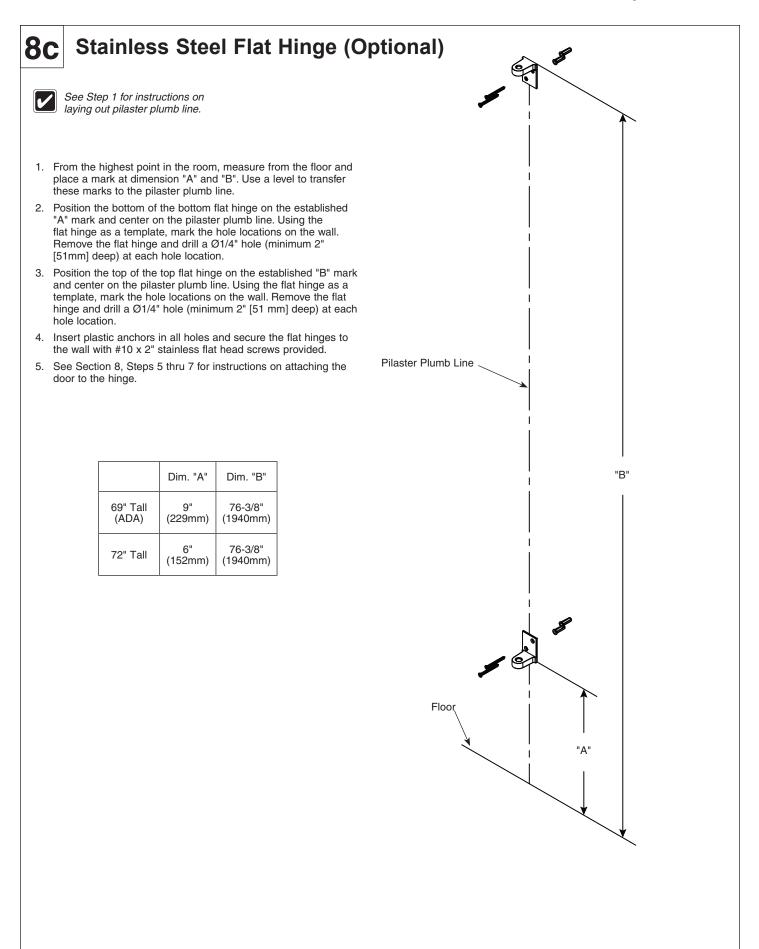


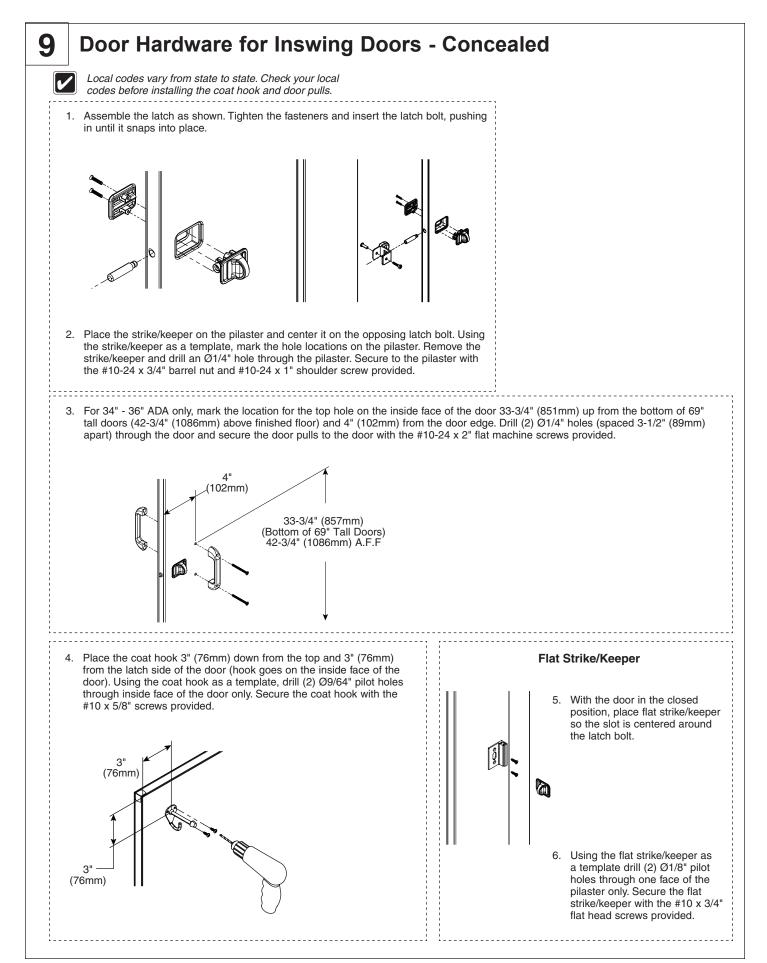


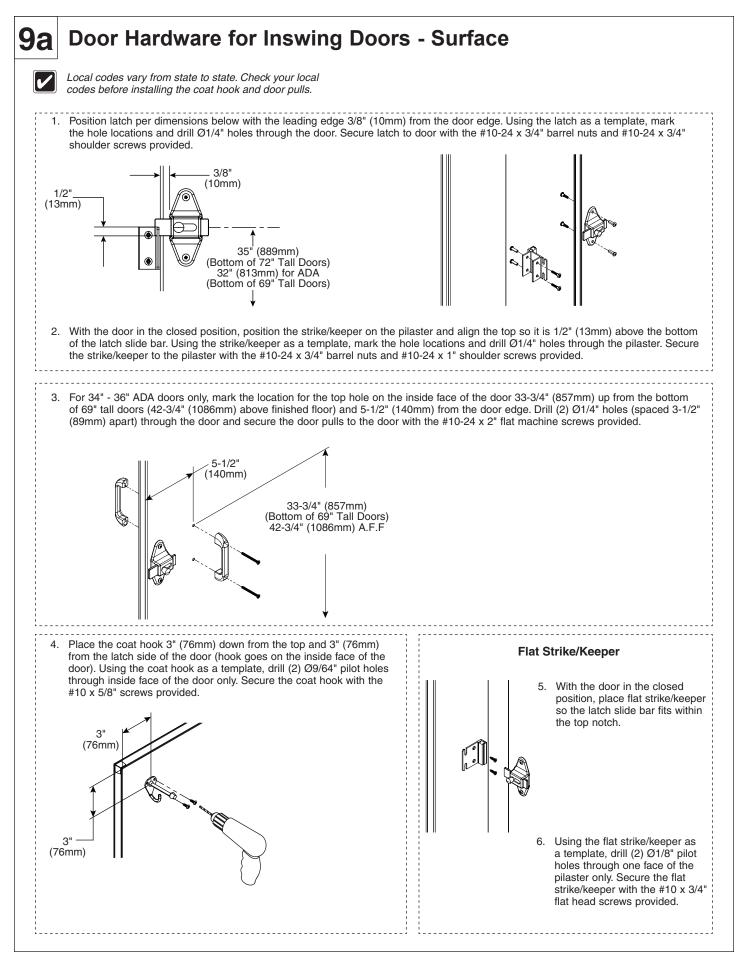

Bradley • HDWT-INSTR-039 Rev A; ECN 17-14-005R

12/3/2018

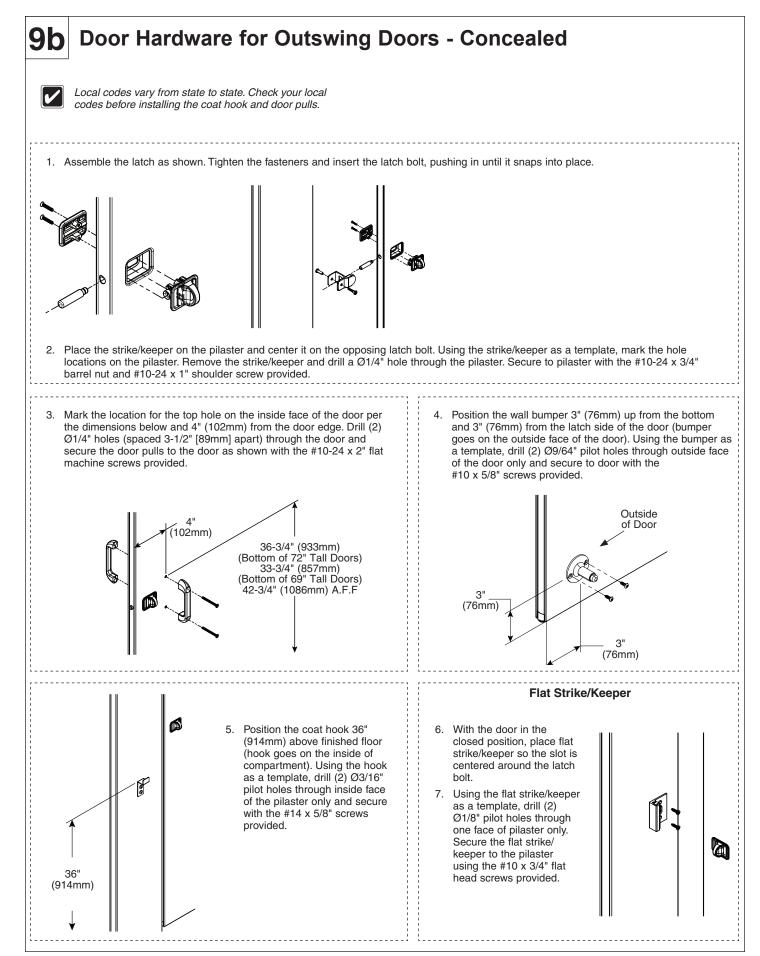

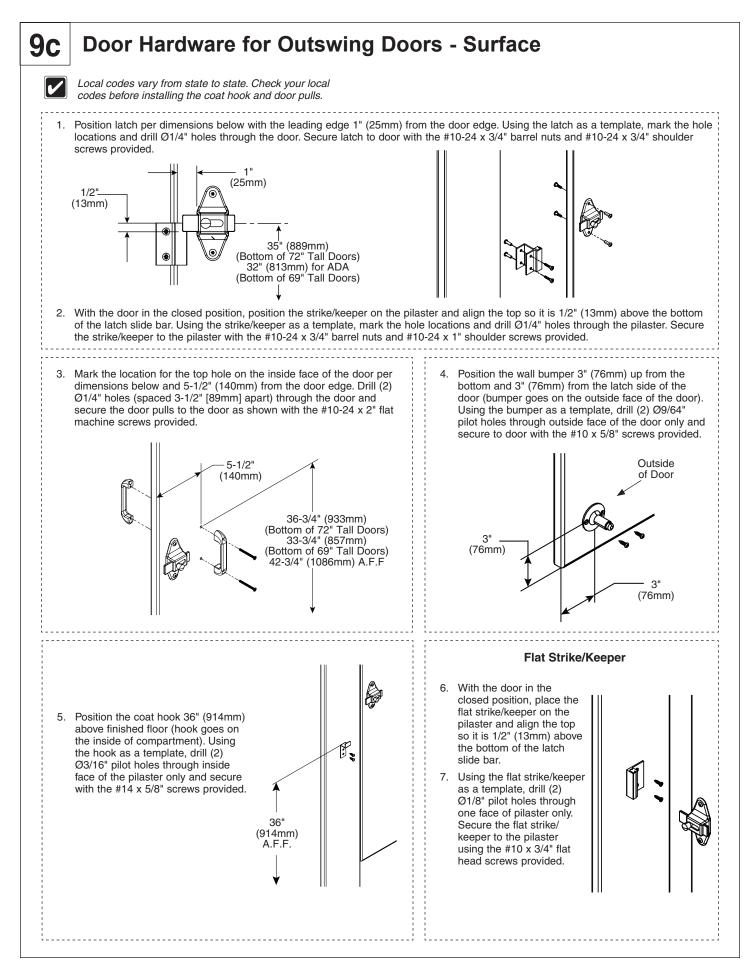

Bradley • HDWT-INSTR-039 Rev A; ECN 17-14-005R

12/3/2018

