




AMERICAN SPECIALTIES, INC.
441 Saw Mill River Road, Yonkers, NY 10701
(914) 476.9000 • (914) 476.0688
www.americanspecialties.com

MODEL №: 20365

ISSUED: 09 JUN 2010

REVISED: 04 APR 2019

AUTOMATIC FOAM SOAP DISPENSER

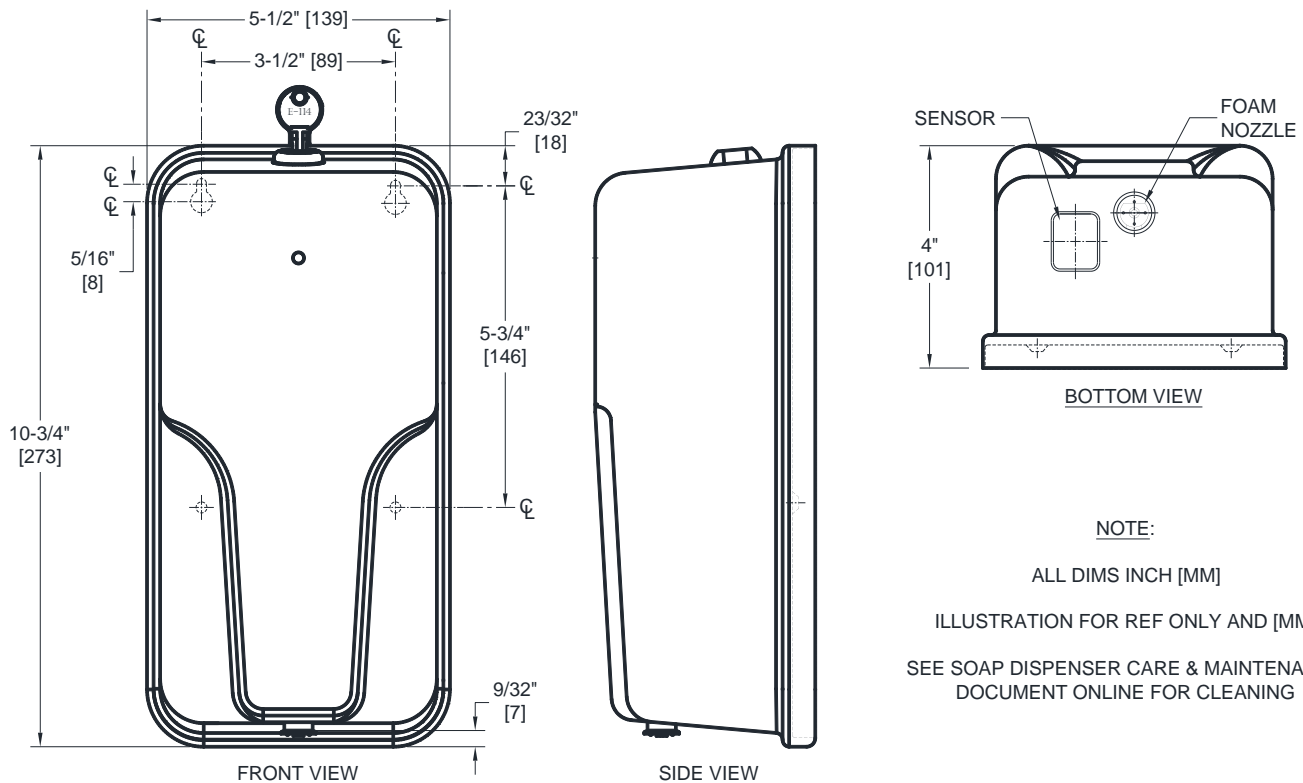

NOTE:

ALL DIMS INCH [MM]

ILLUSTRATION FOR REF ONLY AND [MM]

SEE SOAP DISPENSER CARE & MAINTENANCE
DOCUMENT ONLINE FOR CLEANING

SPECIFICATION

Automatic Foam Soap Dispenser shall hold 33.8 oz (1 L) of liquid foaming soaps within the viscosity range of 5-1500 cP (MPa•s) and pH range of 7 ± 1.5 and dispense in cycles of single shot foam volume ranging from 1/2 oz to 1/3 oz (7 cm³ to 9 cm³) using 0.02 oz ~ 0.03 oz (0.6 ~ 0.77 ml) liquid for each shot. Operation is initiated by hands-free sensor controlled by microprocessor digital circuitry powered by four (4) AA-size batteries (not supplied) in a concealed compartment and locked inside unit bottom. Unit shall be 22 gage type 304 stainless steel alloy 18-8. All exposed surfaces shall be satin finish. Cover shall have lock keyed alike with other ASI washroom accessories. Unit shall have an LED to indicate function and operational condition on front face. Internal tank shall be translucent to show quantity of soap remaining at any time when cover is opened and shall be easily removed to facilitate filling and external storage of full tanks. Unit shall mount to wall on concealed base plate with screws secured under locked cover. Mounting template and Owner's Manual shall be provided with unit in each carton.

Automatic Foam Soap Dispenser shall be Model № 20365 of American Specialties, Inc., 441 Saw Mill River Road, Yonkers, NY 10701-4913

INSTALLATION

Secure concealed base plate to wall with four (4) self-tapping screws (supplied: two (2) № 8 x 3/4" (M4.5 x 20) pan head & two (2) № 8 x 3/4" (M4.5 x 20) flat head) through mounting holes provided in plate into plastic wall anchors (supplied) or other suitable mounting system (provided by others). For compliance with 2010 ADA Accessibility Standards install unit so that bottom of unit is no higher than 48" [1219] MAX AFF. Minimum distance to counter top is 12" [305]. Install four (4) AA-size batteries (not supplied) in concealed battery compartment according to polarity indication and snap-latch battery door. Fill tank with appropriate viscosity soap to correct level and lock door. Locking door activates concealed button to initiate operation. Retain key provided for future access.

OPERATION

Unit shall operate each time an object is positioned within the sensing distance of 3-1/8" [80] \pm 3/8" [10] from unit bottom. A foam drop of 1/2 oz to 1/3 oz (7 cm³ to 9 cm³) will be pumped out of the nozzle on unit bottom for each activation while batteries are at suitable charge level (LED is not flashing) and correct viscosity liquid soap is present in the tank. Door has lock to provide security and vandal resistance after each soap refill and battery change service interval.