

# M E T A L FLOOR MOUNTED ELITE INSTALLATION MANUAL



#### **General Notes**


The following installation instructions are based on the most common unit arrangement. Other arrangements will be encountered, i.e. units contained between two walls or between two freestanding panels.

For dimensional information, refer to your plan layout and dimensional details. Note in particular the relationship of the panels to the pilasters (panels do not necessarily fall on the centerline of the pilaster).

Varying site conditions can affect the installation process. To effect a rigid and level installation, it is important for installers to be aware of and compensate for uneven floor and wall conditions.

It is the distributor's responsibility to supply end-users with maintenance and warranty information.



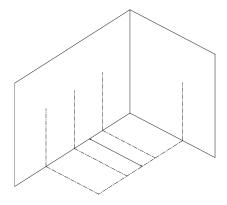


#### 1

#### **Establish Floor Bracket Locations**

Establish front centerline by taking the overall compartment dimension and deducting 16 mm (5/8").

Use final layout drawings to determine locations.

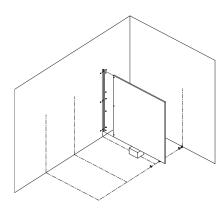


### 3

#### **Erect Panel**

Using your centerline locations, fasten wall channel to wall. The bottom of the channel should be 159mm (6 1/4") from floor.


Rest panel on 152mm (6") block and position in channel, leaving 13mm (1/2") clearance between wall and panel. Drill one hole through top of channel and fasten.

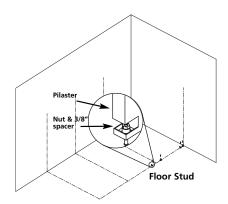

#### 2

#### **Fasten Floor Studs**


Drill holes for floor studs 25mm (1") in from edge of pilaster locations as indicated on layout drawing.

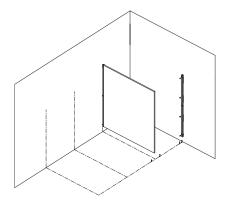

#### 1

#### **Place Pilaster Channel**

Fasten channel to wall at centerline. Bottom of channel should be 159mm (6 1/4") from floor.

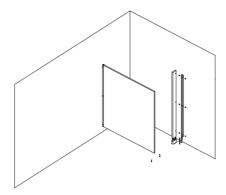


# 5

#### **Erect Wall Pilaster**

For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel. Slide shoe onto pilaster.

Position pilaster in pilaster channel and over floor studs. Install floor stud hardware, plumb pilaster, and tighten. Attach pilaster to channel.

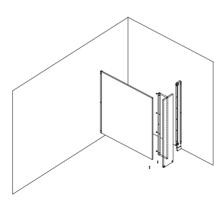


# 7

#### **Fasten Channel To Pilaster**

Place next pilaster on floor studs and mark center line of panel on the back. Bottom of channel should be 159mm (6 1/4") from floor. Using the channel as a template, mark drill holes.

Remove pilaster from floor studs and fasten channel.

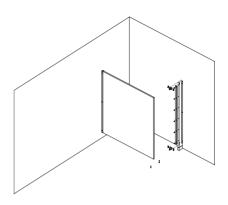


#### 6

#### **Prepare Pilaster For Door**

Fasten upper and lower hinges to wall pilaster.

Place hinge side filler between hinges, pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

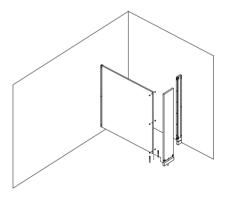


### 8

#### **Erect Pilaster**

Slide shoe onto pilaster (ensuring edges are parallel as noted in step 5). Position pilaster on floor studs with channel engaging panel.


Drill one hole through top of channel and fasten.

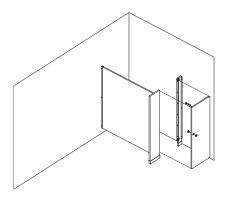

# 9

#### **Prepare Door For Hanging**

Install female cam in the door.
Install latch, and coat hook/bumper.

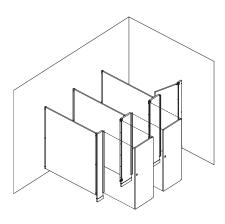

# 11


#### **Erect Remaining Compartments**

Ensure all pilasters are fastened to floor studs, add all remaining fasteners and repeat steps 3-11 (as necessary) for all remaining compartments.

Note: Hadrian recommends installing one compartment (including door) at a time.

#### **Optional Item**

Continuous Hinge Replaces conventional hinge and hinge filler

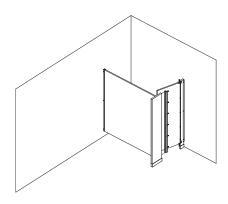

# 10

#### **Hang Door**

Insert male cam into bottom hinge and lower door onto it. Install threaded upper hinge pin. To set doors at the required angle, loosen the nut of the male cam assembly, set door at required angle, and tighten nut.

Place continuous stop on pilaster, ensuring the top lines up with the locking bar seam on top of the door. Pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

# **Contact Hadrian:**

# IN CANADA & AREAS OTHER THAN USA:

Hadrian Manufacturing Inc., 965 Syscon Road, Burlington, ON L7L 5S3 tel: 905-333-0300 fax: 905-333-1841

CAN toll free fax: 1-888-817-7701

# IN THE USA:

Hadrian Inc., 7420 Clover Ave., Mentor, OH 44060 tel: 440-942-9118 fax: 440-942-9618

USA toll free fax: 1-800-536-1469