
# Installation

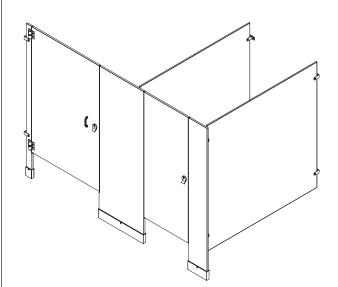

For Standard Height Doors and Panels Only

## Phenolic Privacy Restroom Partitions Floor-Braced — Series 500

### **Table of Contents**

Safety Information2
Supplies Required
Hardware Provided
Example of Submittal Drawing
Door Descriptions & Part Numbers
Pilaster Descriptions & Part Numbers5
Pilaster Configurations & Part Numbers6
Pilaster Configurations & Wall Hung Part Numbers7
Layout Dimensions for Brackets
Mounting Brackets to Wall
Leveling Screws to Pilaster11
Mounting Brackets to Pilaster12–13
Pilaster Mounting Hardware14
Pilasters and Panels15–16
Wall-Hung Pilasters
Pilaster Shoes
Hinges
Door Hardware
Urinal Screens



Read the instructions in this manual before beginning installation. Save these instructions and refer to them for inspection, maintenance, and troubleshooting information.

For questions regarding the operation, installation or maintenance of this product, visit bradleycorp.com or call 800.BRADLEY (800.272.3539).

Product warranties and parts information may also be found on our website at bradleycorp.com.



HDWC-INSTR-042 Rev. A: ECO 20-14-002S © 2021 Bradley Page 1 of 29 6/25/2021 P.O. Box 309 Menomonee Falls, WI 53052 USA 800 BRADLEY (800 272 3539) +1 262 251 6000 bradleycorp.com



# **Safety Information**

#### Warning

Before beginning installation, make sure that the wall and floor backing are adequate to support the secure mounting of the toilet compartment units.

Partitions are extremely heavy and may require more than one person to position and install.

Failure to comply with these instructions may result in personal injury and/or property damage and will void the partition warranty.

#### Caution

Personal protective equipment (PPE) is required during the installation and maintenance of this product.

#### Notice

To prevent warping, always lay the material flat. Do not lean the material against the wall or stack unevenly.

Make sure all floors and walls are clean and smooth. Remove loose impediments, such as protruding nails and other debris which could affect installation.

To minimize break-out, always use a support block when drilling through the material.


Carefully remove components from skid, do not drag.


#### Important


Review your partition layout drawings and verify the number of stalls and components before beginning installation. All components are labeled with their corresponding part number. Descriptions and part numbers for doors, pilasters, and pilaster configurations are listed on pages 4–7 for easy identification.

Read this installation manual completely to ensure proper installation, then file it with the owner or maintenance department. This installation manual provides instruction for the assembly of normal partition configurations and standard components. Non-standard configurations or components including but not limited to curved or angled walls, partial walls, oversized panels, or modified hardware are not covered in this manual. Compliance and conformity to local codes and ordinances is the responsibility of the installer.

Separate parts from packaging and make sure all parts are accounted for before discarding packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.

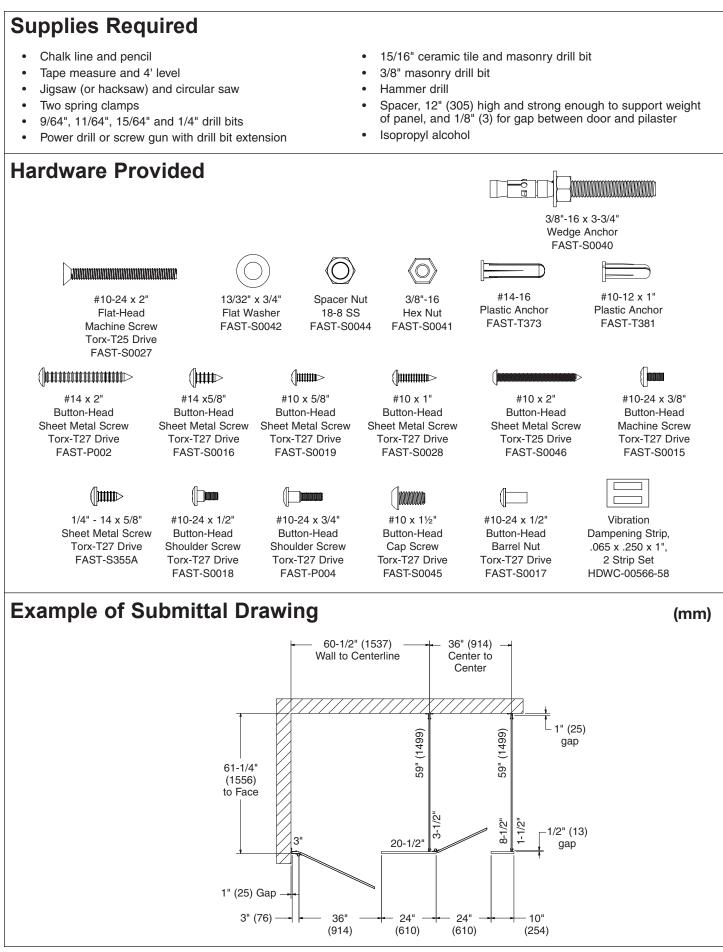


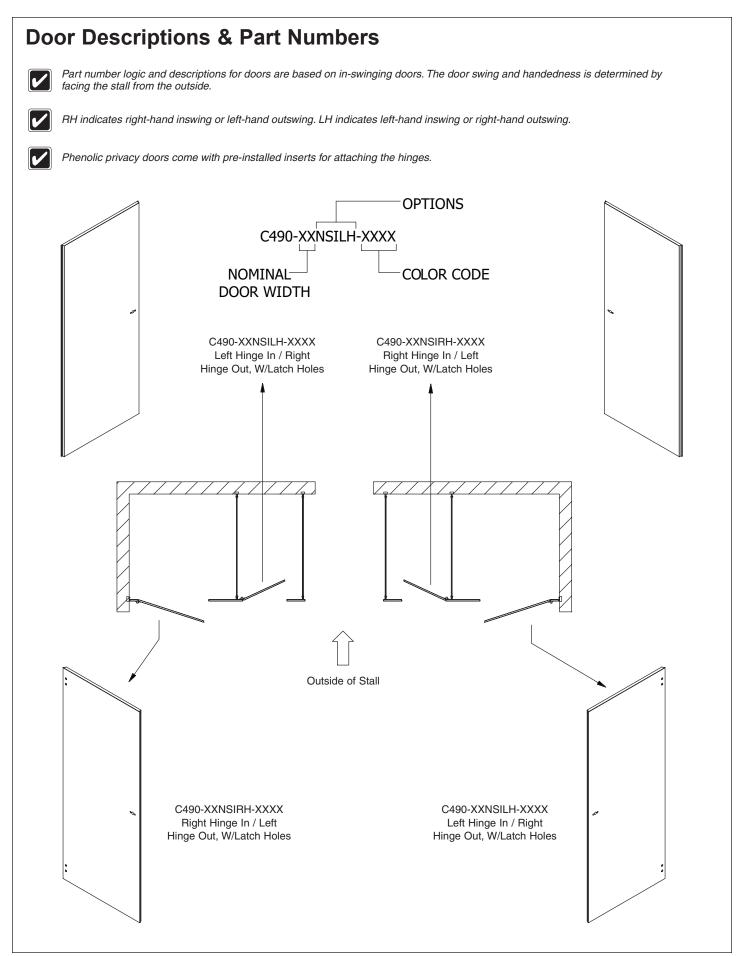


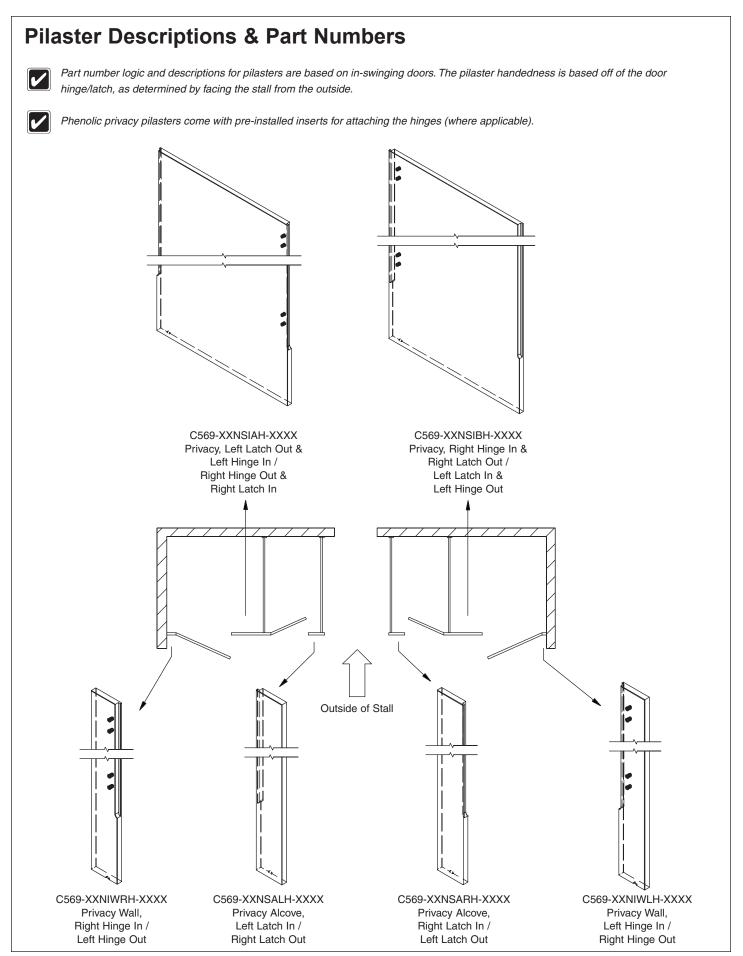



Bradley • HDWC-INSTR-042 Rev. A: ECO 20-14-002S


6/25/2021

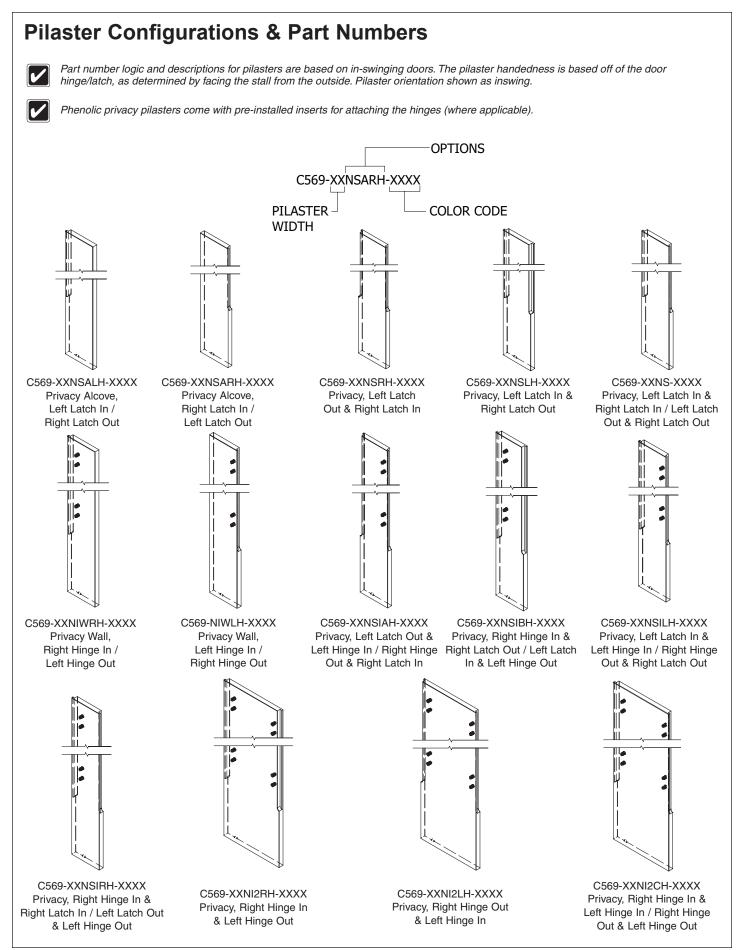

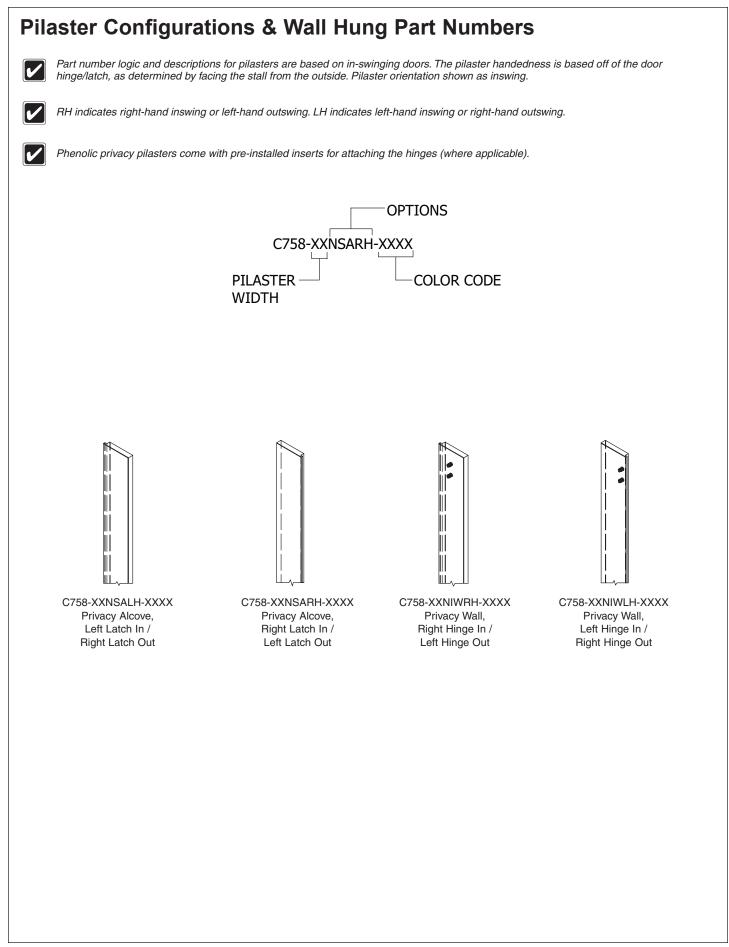


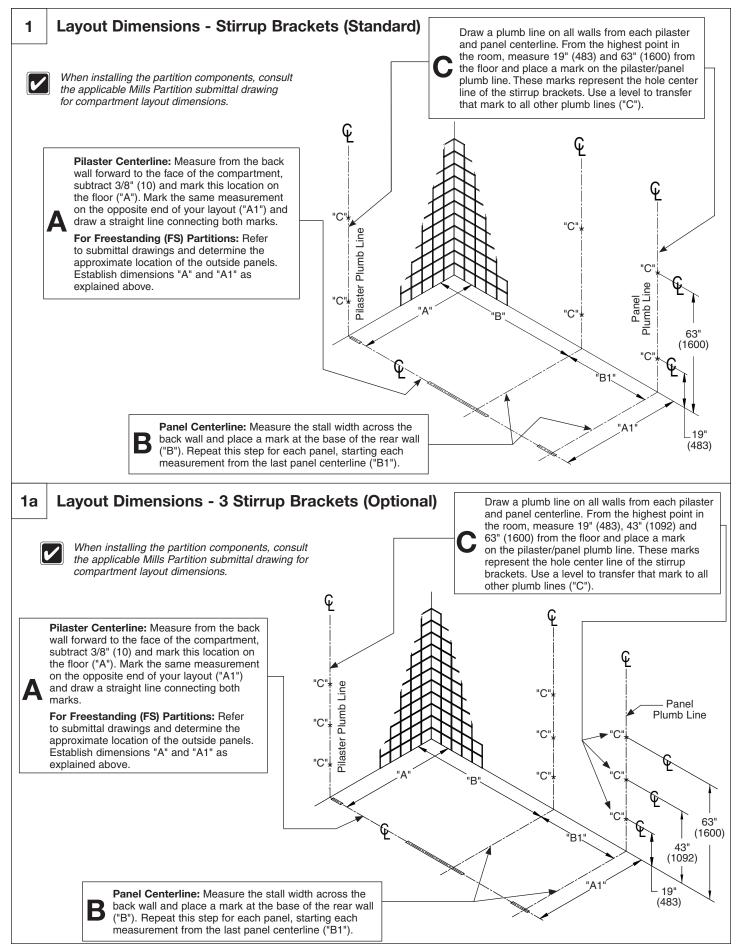


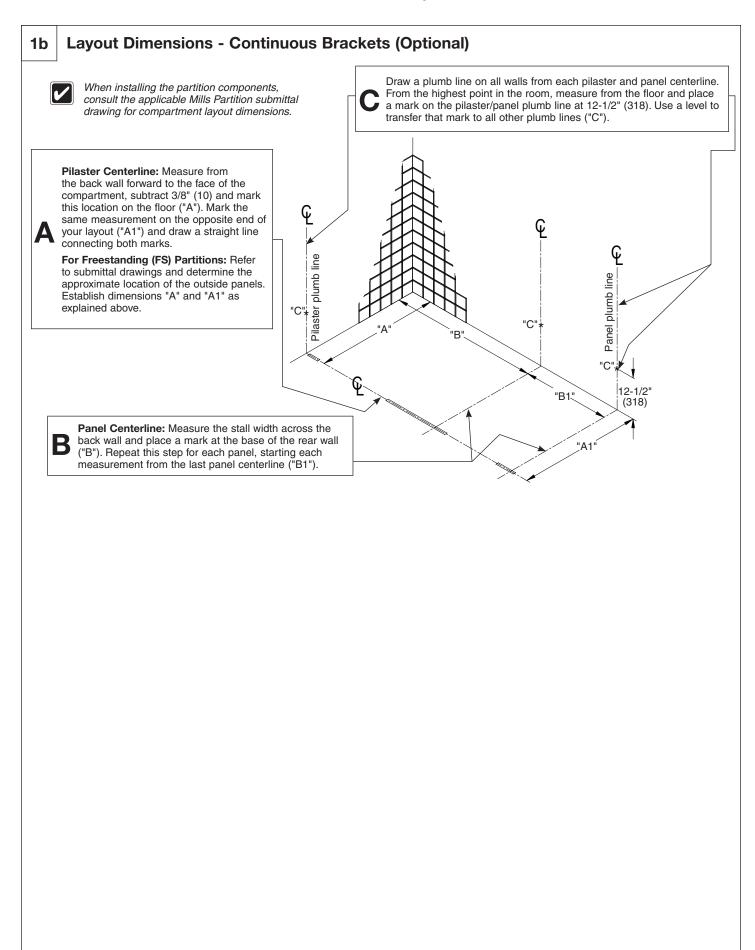


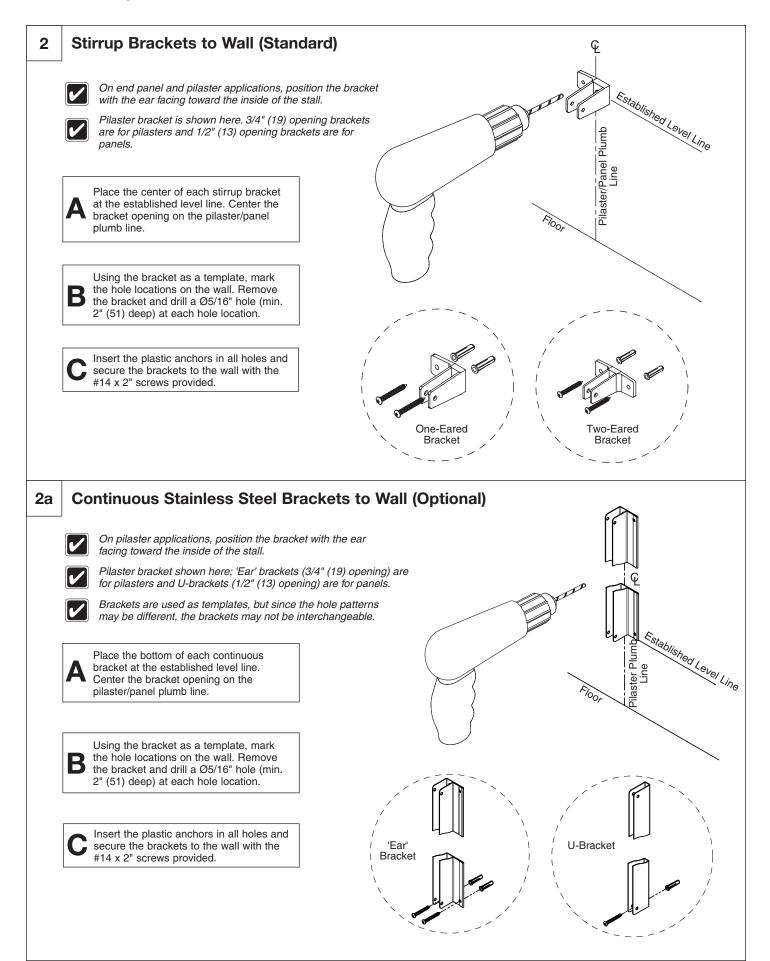



A notch will be present on one end of the pilaster to indicate that it is the bottom. (Bracket is covering notch in views shown.)	3"–4" Pilaster	5"-24" Pilaster
Slide the shoe onto the bottom of the pilaster and use a piece of tape to keep the shoe positioned about 5" (127) from the end. Make sure the shoe mounting hole is towards the top.		
Orientate the leveling bracket(s) as shown. For 3"-4" pilasters, determine which edge of the pilaster will be the furthest from the wall and orientate to that edge.		
Push bracket locating bumps tight against the bottom of the pilaster and align the side of the leveling bracket with the pilaster edge.		
DO NOT let the leveling bracket(s) overhang the edge of the pilaster or the shoe will not be able to slide down over the bracket(s).		00
Using the leveling bracket as a template, mark the hole locations on the pilaster. Remove bracket and drill $\emptyset$ 1/4" holes through the pilaster. Secure bracket to the pilaster using the #10-24 x 1/2" barrel nuts and #10-24 x 3/4" shoulder screws provided.	L J L	

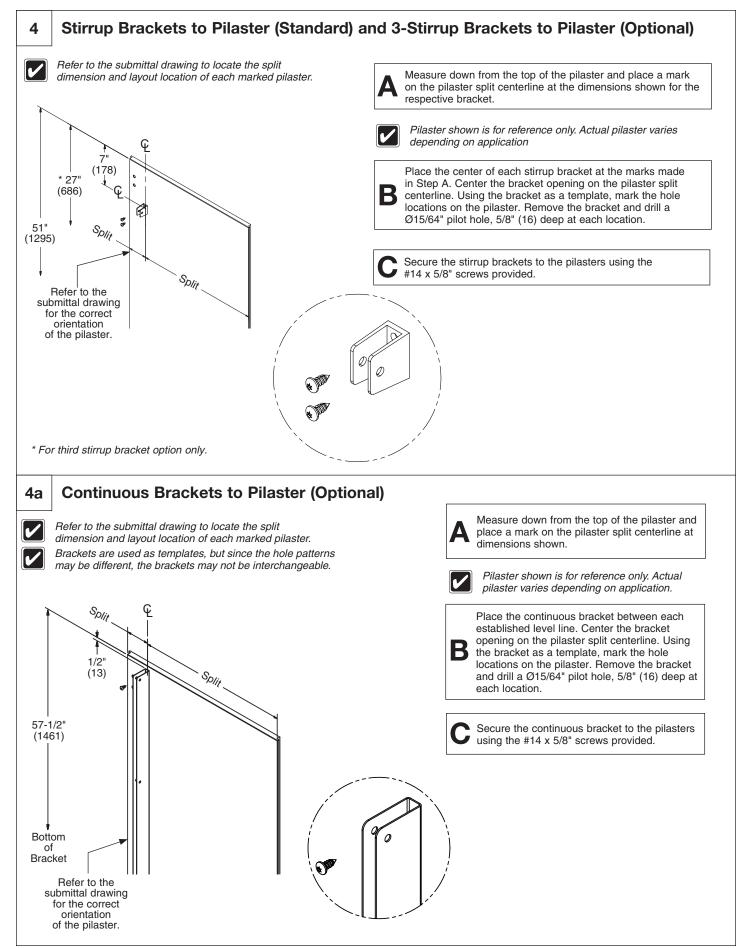


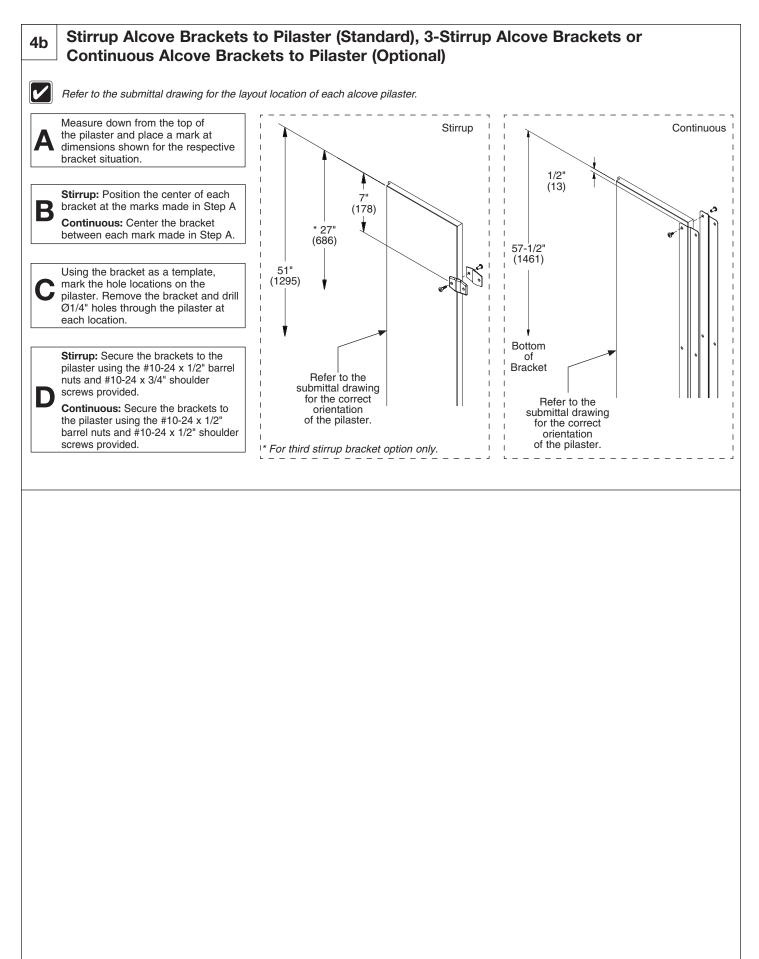

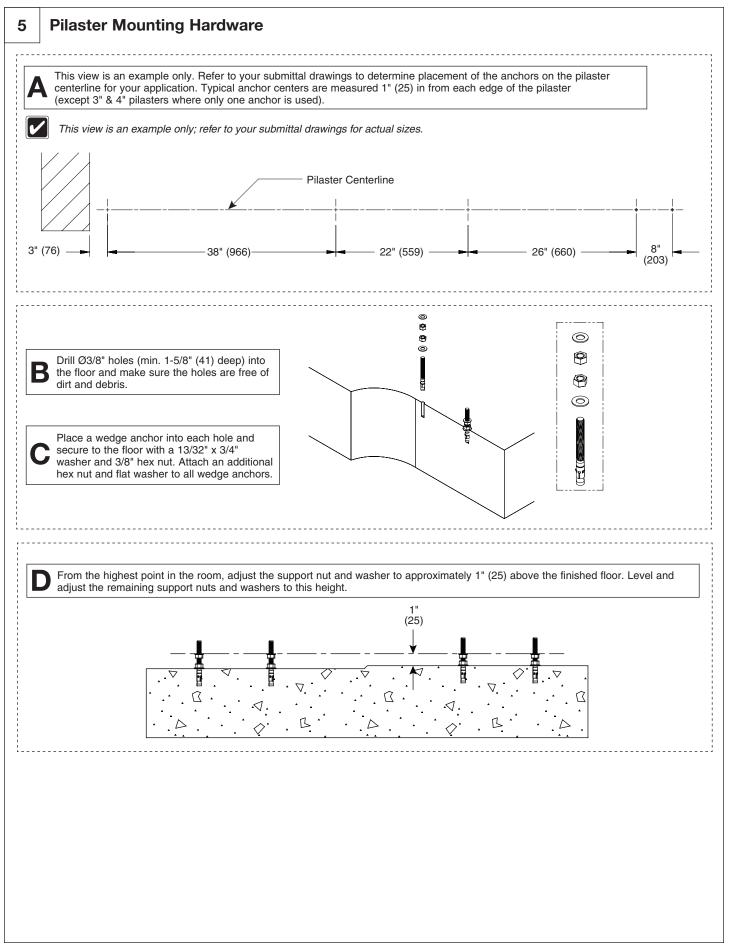

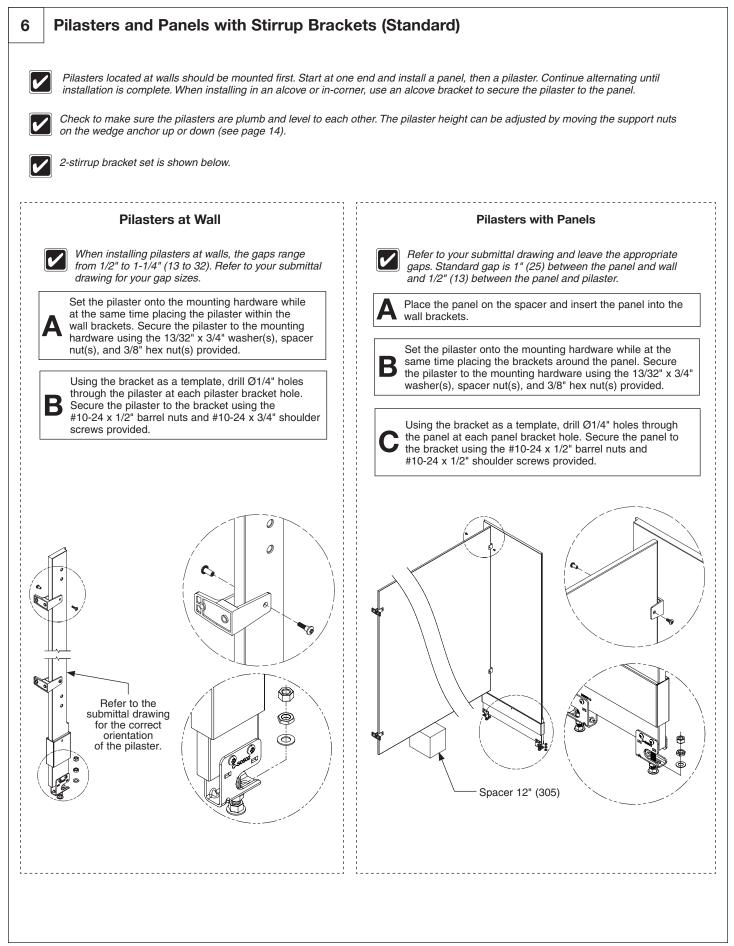

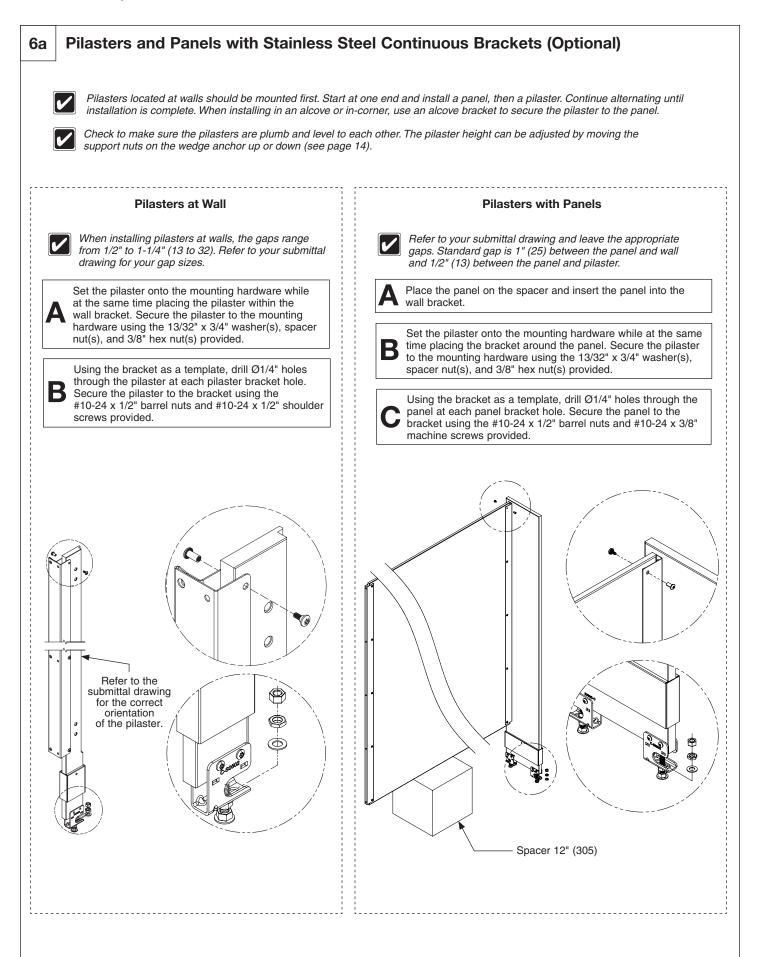

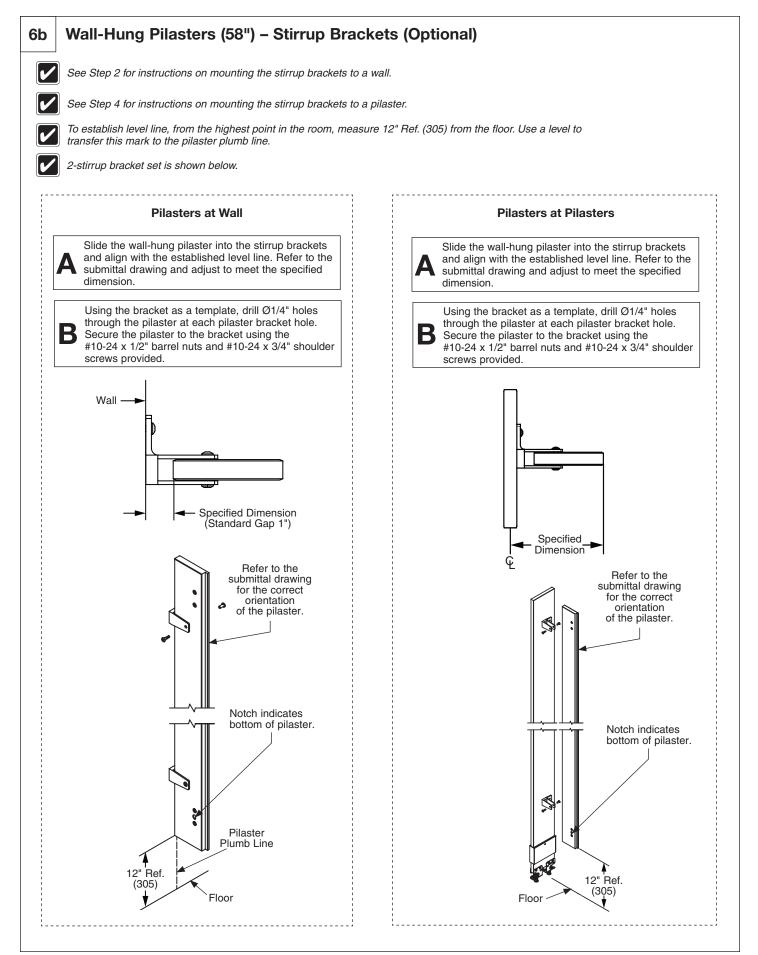

Bradley • HDWC-INSTR-042 Rev. A: ECO 20-14-002S

6/25/2021

